

Warmwatcher

- the Watcher that keeps you warm



Troubleshooting

Children between 3 and 8 years old should only be allowed to switch the

 
attention has to be given where children and vulnerable people are present.

- WARNING When using electrical appliances, basic safety precautions should be positioned directly under a socket outlet. 15 Do not use this heater in conjunction with a timer device or any other device always be followed. Failure to comply with these instructions may cause
- appliance on/off, provided that it has been correctly installed in its intende persons with reduced physical, sensory or mental capabilities or lack of operating position and they have been given supervision or instruction experience and knowledge if, they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards concerning use of the appliance in a safe way and understand the hazards involved. They should not plug in, regulate, perform maintenance or clean th involved. Children should not play with the appliance. Cleaning and CAUTION — Some parts of this product can become very hot and cause burns. Particu
- DO NOT position the heater on soft surfaces or where openings may become blocked. Ensure the base is fitted and fully assembled, and the unit is upright on a flat stable surface before operating. This heater is designed for use on Patios and in Beer gardens & smoking areas. The unit has been IP55 Weatherproof approved; however, to prolong the life of the heater it is strongly recommended that the heater is stored in a dry place during he
- lawnmower. Arrange the cord away from areas where it may be tripped over. DO NOT insert or allow objects to touch the heating element and never place anything on the heater safety guard (e.g. towels), as this may damage the heater and could cause an electrical shock or fire. Never use vour heater to
- 8 DO NOT use the heater in areas where petrol, paint, or other flammable
- 9 Always unplug the heater when not in use. To disconnect from the power
- objects and ensure that they are at least 1.5 metres from the front and 1
- 12 In order to avoid overheating, do not cover the heater.

- 14 Never locate the heater where it may fall into a swimming pool or other water container. Never use in a bathroom or shower room. Heater should not
 - energy efficient carbon fibre infrared technology. It must only be used for this intended purpose and shoul
- and must be in place when the heater is on.
- en is very dirty use a damp cloth and wipe dry. Do not use any cleaning detergents, rays or other chemicals, as they will damage the unit. A dirty reflector reduces heater output. maintenance should not be attempted by children without supervision.
- : 1250-1480W / 2500-2960W or as per outer box service agent or similarly qualified persons in order to avoid a hazard.
- rain and when not in use cover the appliance with the cover provided. DO NOT hide the power cord in long grass or leave close to an operating
- substances are stored.
- supply, grip the plug and pull from the power socket. Never pull by the cord. 10 DO NOT direct the heater towards curtains, furniture or other flammable
- metre from the top, back and sides.

- ed according to the instructions included in this manual. Please carefully read all operating and safety instructi
- 7 This appliance can be used by children aged from 8 years and above and
- dry washing. If the heating element has stopped glowing it may still be live, please check that the heat setting indicates the heater is off.
- Always disconnect your appliance from the mains before any cleaning.
- 11 Extreme care should be taken when the heater is used near children and pets.
- 13 The electrical cord must be fully unwound before use

- fire, electrical shocks or other injury to persons or property. which facilitates unattended switch on. pefore use. Never cover appliance when in operation and ensure that flammable objects (clothes, curtains, etc.) cannot come n close contact with the appliance. You may also find this manual's content at www.warmwatcher.com 16 The front grille is intended to prevent direct access to the heating elemer Children of less than 3 years should be kept away unless continuously supervise
 - heater use a soft cloth to wipe off any dust. If the heater is very dirty, use a damp cloth and wipe dry. Do not use any
 - 18 If the supply cord is damaged, it must be replaced by the manufacturer, its `utput : 2510-2970W 220v-240v AC ~ 50Hz or see Rating Label
 - uct Dimensions: 50cm base diameter & 190cm high unit assembly (take out base accessory from the box underneath main bo Lie main body(F) on the edge of its box to avoid scratching and for easy assembly with the base.



Align the two halves of the Base(G), make sure the wheel and











Slide the base through the four bolts located n the bottom of main body (F). Securely fasten metal plates (A x 2) with the wing nuts and

2 Turn the Base upside down and securely fasten

Attach each half of the metal cover. (H x 2)

should be placed over the rollers.

metal plates (B x 2) with wing nuts and washers

One half of the metal cover has a cut-out that

Infrared heating elements —

Energy saving mode indicator The Media Player Head can be tilted in 4 positions Do not force or over rotate these 4 positions as the flexi-neck may get damaged

Use the hand grip located on the rear of the unit to manoeuvre

the Appliance. To ensure the lifetime of the Glass Heating Tube

avoid shakes, shocks, vibrations during moving.

Observe recommended safety distances from

Instant enter to play pictures Move cursor to left of picture

Sensor window ----

The PIR economy feature enables the outdoor heater to automatically shut down its heating function when not in use. The PIR sensor constantly monitors people's movements up to a distance of 4 metres and if after 4 minutes it does not detect movement it will switch the heating off.

ing the 3.5mm Aux lead, insert your equipment to "Aux" port on the Player, press key "LEFT" or "RIGHT" choosing "Aux" from the Main Menu and "ENTER". Operate your equipment to play the files you want. To free your han

Working temperature: -20° C $\sim +40^{\circ}$ C DO NOT use in sun

"ENTER" it, use key "UP" or "DOWN" to choose the file or folder. Press key "RIGHT" to enter the folder or to locate the file (use key "UP" or "DOWN" to choose more files if needed and locate them by key "RIGHT"), then press "MENU" to

Broadcast format: JPEG,BMP,MP3,WMA,MPEG1,MPEG2,VOB,DAT,MOV,AVI(XVID),DIVX etc (WMA、VOB need license) nter the hardware or the folder then "ENTER" to carry out.

ress key "LEFT" or "RIGHT" choosing hardware "SD" or "USB" from the Main Menu, "ENTER" to find "File" on screen

hoose Copy, "ENTER" then "UP" or "DOWN" to choose hardware first(C for SD & D for USB), press key "RIGHT" to.

technical helpdesk -- see warranty card.

Heater not on a level Ensure Heater is situated on a level and solid surface.

Power Cord Damaged Inspect power cable for cuts, breaks and k

Possible cause Solution

call the technical helpdesk -- see warranty card.

press button" 💂 " on the Remote Controller or Control Panel until the MP Pilot Light is visible. Main Menu will be on slowly after the player is switched on. Use the remote controller to operate MP only.

Screen: 7 inches TET LCD. DPI: 720*576

Power output: 10W 100-250v AC ~ 50/60Hz

edia Plaver Technical Data

upport: USB, MP3,MP4(audio),lpod,lphone,Hot plug,Aux inpu

erating Media Plaver

Before use, you may peel off the protective slim film on the screen. Make sure the Power Indicator is on and then

"ENTER" it to find the picture you want to play. If you press the key "PHOTO" for instant enter, pictures in the current hardware will be played. While playing, press key "MENU" you could use "LEFT" or "RIGHT" key to choose from the screen: Previous / Play o

Model No.: TMP1

Memory: 4GB SD card

Pause / Next / Rotate / Exit / Enlarge. Press "ENTER" to carry out. Read "SETUP" below to choose playing mode.

the pictures with music in the hardware you chose. If you press the key "SLIDE/MUSIC" for instant enter, pictures and music in the current hardware will be played. While playing, press key "REPEAT" music, you could choose from the screen; Repeat One / Repeat All / Stop Repeat.

If press key "MENU" to edit picture, you could use "LEFT" or "RIGHT" key to choose from the screen: Previous / Play or Pause / Next / Rotate / Exit / Enlarge. Press "ENTER" to carry out.

ia Plaver description hardware will be played.

> While playing, press key "REPEAT" music, you could use "LEFT" or "RIGHT" key to choose from the screen: Repeat One / Repeat All / Stop Repeat. Press "ENTER" to carry out.

Pause / Forward / Next / Exit / Enlarge. Press "ENTER" to carry out.

adjustment, then press key "ENTER" to locate. ress key "LEFT" or "RIGHT" choosing hardware "SD" or "USB" from the Main Menu, "ENTER" to find "Photo" on scree

Jse key "LEFT" or "RIGHT" choosing hardware "SD" or "USB" from the Main Menu, press key "SLIDE/MUSIC" will

Power Switch OFF Turn Power Switch ON at the back of the heater. No Power to unit Check the mains or the electrical socket to restore circuit.

ENTER" it to find the music you want to play. If you press the key "MUSIC" for instant enter, music in the current

Instant enter to play video

"ENTER" it to find the video you want to play. If you press the key "VIDEO" for instant enter, video in the current

place your equipment into the Audio Source Holder which is fixed to the Head of the Heater. You could control the volume by pressing key "VOL+" or "VOL-" from the remote control.

oose Delete, use key "ENTER" to carry out.

Language / Slideshow Time / Transition Effect / Music Repeat Mode / Movie Repeat Mode / Display Mode / Time / Alarm / Power On / Power Off / Brightness / Contrast / Saturation / Default totally 14 different functions. Use key "UP" or "DOWN" choosing function, press key "LEFT" or "RIGHT" to select your

et Calendar,clock,alarm,time-switch

Please refer to above instruction of "Setup" to find function choice you need to adjust.

Possible cause Solution

Store,Copy & Delete files

Main Menu, "ENTER" to find :

ess key "LEFT" or "RIGHT" choosing hardware "SD" or "USB" from the Main Menu, "ENTER" to find "Music" on screen

Press key "LEFT" or "RIGHT" choosing hardware "SD" or "USB" from the Main Menu, "ENTER" to find "Video" on screen.

While playing, press key "REPEAT" video, you could choose from the screen: Repeat One / Repeat All / Stop Repeat. press key "MENU", you could use "LEFT" or "RIGHT" key to choose from the screen: Previous / Backward / Play o

 
Play Aux from MP3,MP4,Ipod,Iphone

Start from the Main Menu (you may need to press key "EXIT"), press key "LEFT" or "RIGHT" choosing "Setup" from the occur please call the technical helpdesk -- see warranty card. Blown Carbon Fibre Blown tubes are usually visible. Check for black or white discolouration at either end of the tubes.

eing visible in the unit control

anel display but no heat from

Possible cause Solution Heating function is PIR function is effective with LIVE heating only. Please turn on he



		Indicator	systems of the unit. Please switch off the unit immediately, leave fo
eplacement power om the technical			minutes and switch on again. If this continues to occur please call technical helpdesk see warranty card.

II no tubes heating – then check if any of the Orange Power Need a little bit patience The Media Player needs few seconds to start after you switch on the pilo n? If LEDs are ON (ORANGE) then tube / tubes have blown. If NO light. So wait a little bit time. o's are lit and NO tubes are heating up then wait 30 minutes for ur auto-reset then switch on. Repeat if necessary. If this continues to atch on Repeat if necessary. If the problem continues to occur pl nis unit uses specialised high temperature carbon fibre heating tub call the technical helpdesk -- see warranty card. nly. For replacements, please call the technical helpdesk -- see Safety Tip Over Switch Safety Tip Over stuck in OFF position. Give the unit a rigorous shake h may reset the switch. If this does not rectify the problem, please movie on after you press by the MP "Media Player Technical Data" to find the supported formats. Besides, make sure your sources' DPI are not bigger than the figure MUSIC / VIDEO" on remote stated in the "Data". Possible cause Solution Dark block around the Different scenario or It is normal because, different digital camera use different scenario o

Media Player not working Power Switch OFF Make sure the Power Indicator LED is on by turn Power Switch ON at No Power to unit Check the mains or the socket or plug's fuse(if there is) to restore circ

call the technical helpdesk -- see warranty card. Heater not on a level Ensure Heater is situated on a level and solid surface. Media Player is faulty Replace as necessary. Media Playerh is only available from the technica helpdesk -- see warranty card.

Possible cause Solution ere is no picture, music Source not supported You need to transform the sources' format to supported ones. See page 1997.

PIR / PCB malfunction Please call the technical helpdesk -- see warranty card.

ORANGE LEDs flashing Safety Warning If any or all of the 3 ORANGE LED Indicator Lights start to flash or flick MP System halted Playing file is not of Press MP ON/OFF button to switch the Media Player off. Wait a few

MasterLock is in See Masterlock Function page 7 to unlock the control panel

Heat tubes only not working (indicated by the presence of the RED power standby light Tube Failure / Safety Thermal Fuse in operation.

Tube Failure / Safety Thermal Fuse in operation.

Firstly try the following procedures to evaluate are faulty. Buttons stuck / PCB Please call the technical helpdesk -- see warranty card.

replace battery (Type CR2032/CR2025).

Make sure the red power indicator is visible when you use the Remote

Controller to operate Heating and, the MP Pilot light is visible when

you operate the MP. If the problem continues to occur, you need to

supporting format seconds, press the same button to restart the Player.

the heater's back. Then press Media Player button on control panel or

remote control until the MP Pilot light is visible.